

THE SWING ZONE

PITCHING MACHINE ACCESSORY

Thank you for your purchase of the "Swing Zone".

You will soon be providing your players with realistic, "game like" pitch location changes that will improve players hitting skills.



1160 Monroe Ave. -Rochester, NY 14620
 585-244-3180 Phone – 585-461-5274 Fax
www.unifiedsol.com

Items Included in Kit

- See Figures 1 through 3
- Fig 1 - Swing Zone
- Fig 2 - Wheel Assemblies (2)
- Fig 3 - Adapter

Figure 1



Figure 2

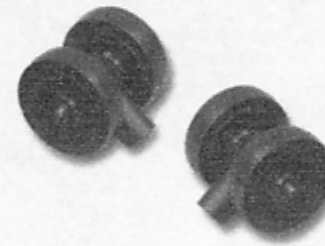


Figure 3



Assembly Steps


- 1) Remove rubber boots from pitching machine legs.




- 2) Insert wheel assemblies into 2 front tripod legs.



- 3) Insert adapter piece in rear tripod leg.

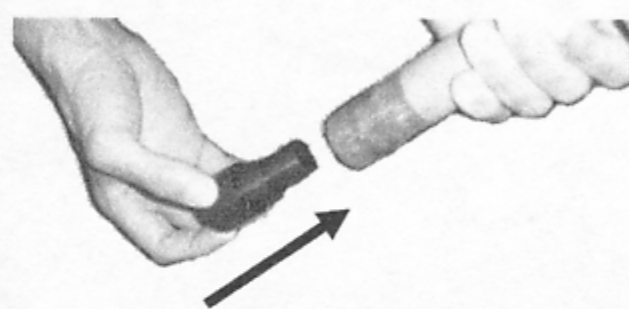

- 4) Set Swing Zone next to rear tripod leg, lift up rear tripod leg of your pitching machine and position Swing Zone ball receptacle under rear tripod leg.

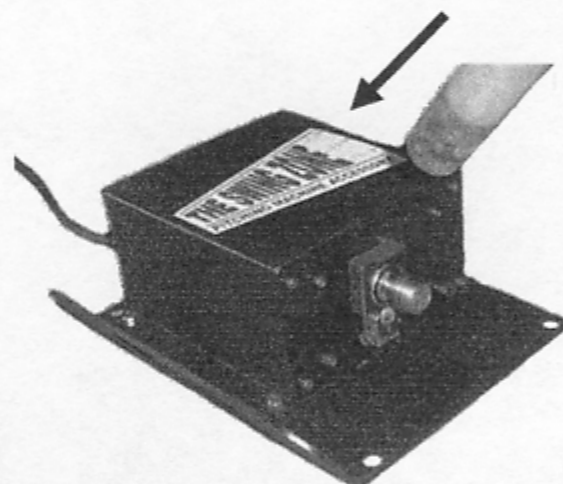


- 5) Only plug power cord from Swing Zone into a grounded AC power source.

Patent pending

Pitching Machine Set-Up and Trial with Swing Zone


- A) Turn on Swing Zone and turn off when receptacle ball is in 12 o'clock position.

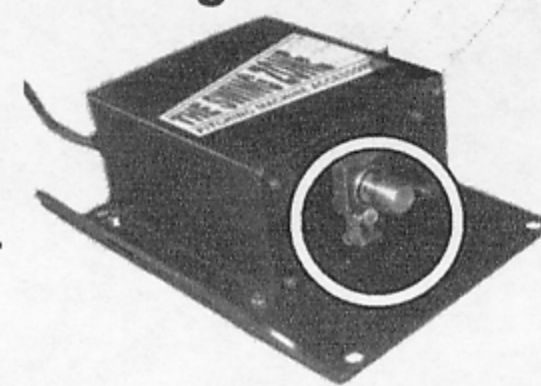

- B) With Swing Zone off, start your pitching machine and adjust until the pitches are in the low/center part of the "Strike Zone".



- C) The Swing Zone will create an oval pattern in the "Strike Zone". Turn on the Swing Zone and you should see this pattern.

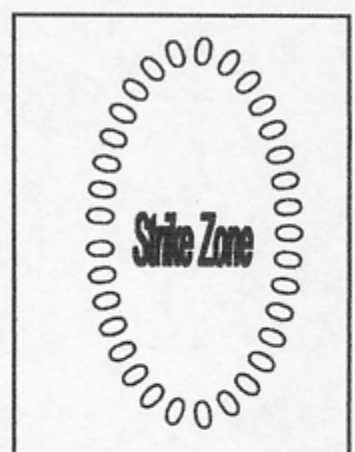

NOTE: You can create more random pitch locations by varying the **time** between delivered pitches.

